

Air Filter Maintenance

Why Change your Engine Air Filter?

- Prevents impurities from damaging the engine
- Improves fuel economy and engine performance

How Often Should I Change my Engine Air Filter?

- When filter appears dirty
- Dependent on driving conditions

Why Change your Cabin Air Filter?

- To improve interior air quality
- Cabin air filter traps pollen, bacteria, and exhaust gases

How Often Should I Change my Cabin Air Filter?

- When filter appears dirty
- Roughly every 12,000 to 15,000 miles